



reximex



RP - RPA

PCP AIR PISTOL OWNERS MANUAL

.177 Cal. - .22 Cal.

**READ ALL INSTRUCTIONS AND WARNINGS
IN THIS MANUAL BEFORE USING THIS AIRGUN**

INDEX



<u>Page</u>	<u>Content</u>
1	Warranty
1	Warning
2	Safety Review
3	General Instructions & Operating Safety
3	Manual Safety
4	Operating Instructions
4	A. Filing The Air Cylinder
5	B. Loading The Airgun
7	C. Un-Loading & Un-Cocking The Airgun
8	D. Jammed Ammo
8	E. Trigger Adjustment
9	F. Detachable Stock
9	G. Regulator Settings
10	H. Maintenance
10	Replacement Of O-Rings
11	I. Storage
12	Mechanism Parts & Part Numbers

1. WARRANTY

All REXIMEX BCP Air Carry a One Year Warranty against any defect in material or workmanship and the dealer from which you purchased the air gun. If the air gun develops a defect within the warranty period, contact the dealer from whom it was purchased. The dealer does not accept any damage caused by tampering with the air gun.

This air gun should only be handled by a qualified repairman.

2. WARNING!

WARNING: THIS AIRGUN IS RECOMMENDED FOR USE ONLY IN THE HAND. IT CAN CAUSE SERIOUS INJURY OR DEATH (DANGEROUS 800 YARDS (7 METERS)).

WARNING: DO NOT BRANDISH OR DISPLAY THIS AIRGUN IN PUBLIC PLACES TO CONFUSE PEOPLE AND MAY BE A CRIME.

DO NOT CHANGE THE COLOR AND MARKING TO MAKE IT MORE LIKE A FIREARM. POLICE AND OTHERS MAY THINK IT IS A FIREARM AND IT IS A CRIME.

YOU AND OTHERS NEXT TO YOU SHOULD ALWAYS WEAR SHOCK GLASSES TO PROTECT YOUR EYES.

BUYERS AND USERS MUST BE AWARE OF THE RESPONSIBILITY OF THIS AIRGUN.

WARNING: NEVER ATTEMPT TO DISASSEMBLE THIS AIRGUN WHILE IT IS CHARGED! FAILURE TO OBEY THIS WARNING COULD BE PERSONALLY DANGEROUS TO THE AIRGUN!

3 SAFETY REVIEW

- Never use the airgun if you are intoxicated or under the influence of drugs.
- Even if there is no pressure sign on the manometer, never disassemble the pressurized tube!
- Never fire the airgun when it is empty of air or when the air cylinder is removed!
- Never point the airgun at anyone, or allow anyone to point a airgun at you!
- Treat every airgun as if it is loaded even if you know it is not loaded!
- Always carry the airgun so that the direction of the muzzle is under control, even if you stumble.
- Always be sure of your target and what lies behind it before firing your airgun.
- Never leave a loaded airgun unattended.
- Beware of targets that tend to cause ricochets.
- It is recommended that eye protection is worn when charging the air cylinder.
- Always use caution when operating this airgun.
- Only use dry cloth to clean any dirt inside the barrel for various reasons (humidity, dust, etc.)
- In your airgun, only use synthetic or mineral base high viscosity oil in order not to create filling effect with lower tolerance parts.
- Learn and obey the laws in your location.
- Be responsible in your use of this weapon!

REXIMEX PCP airguns are designed specifically for use with DRY COMPRESSED AIR. NO OTHER GAS OR GAS COMBINATION CAN BE USED.

The Airgun may be filled by a Diving Scuba Tank or a suitable compressor
MAXIMUM SAFE WORKING PRESSURE (SWP): 250 BAR

DO NOT DISASSEMBLE THE AIR TANK WHILE THERE IS AIR IN IT.



CAUTION!

DANGER OF EXPLOSION!


THE AIR TANK POSES THE EXPLOSION RISK IF IT GETS HEATED SUBJECT TO SUNTRAY FOR EXTENDED PERIOD OF TIME.

(Max. + 40° / Min. -05°)

OTHERWISE, THE AIRGUN SHOULD BE LEFT TO COOL DOWN IN A COOL ENVIRONMENT
RECOMMENDED TO BE TRANSPORTED UNDER MAXIMUM 80 BARS PRESSURE DURING FLIGHTS.

4 GENERAL INSTRUCTIONS & OPERATING SAFETY

- RP & RPA Airguns may be fitted with a scope or alternate optic sights before use.
- Before using your airgun, read and abide by the basic safety rules.

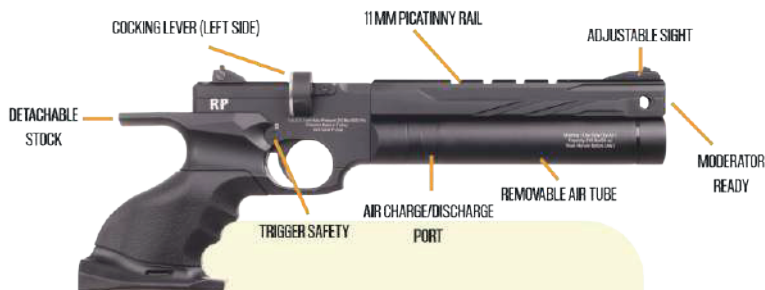

MANUAL SAFETY

CAUTION: Like all mechanical devices, airgun safety can fail. Even when the safety is on "SAFE" you should continue to handle the airgun in a safe manner.

Locate the safety switch of the airgun directly above the trigger guard. Safety switch can be set to "S" (SAFE) and "F" (FIRE) positions manually.

The Letters "S" (SAFE) and "F" (FIRE) are located below the safety switch.

A- Airgun on "S" (SAFE) Position

To set the safety on, push the safety switch from the left side of the airgun. In this position the trigger cannot be pulled and the airgun cannot be fired.

B- Airgun on "F" (FIRE) Position

To set the safety off, push the safety switch from the right side of the airgun. In this position the trigger can be pulled and the airgun can be fired.



WARNING! KEEP THE AIRGUN IN THE "SAFE" POSITION UNTIL YOU ARE READY TO SHOOT. WHEN READY PUSH THE SAFETY SWITCH TO "FIRE" POSITION

5. OPERATING INSTRUCTIONS

A. FILLING THE AIR CYLINDER

Warning!

1. Before filling the air cylinder; make sure the airgun is on "S" (SAFE) position, no pellets are loaded in the air airgun and/or barrel and magazine is not mounted in the gun.

NOTE: If the air cylinder pressure is at "0" Bar, then it will be necessary to cock the airgun to remove the force of the Hammer against the firing Valve. Otherwise, the air will pass through the firing Valve out the barrel, and the air cylinder will not pressurize.

2. Take all safety measures before filling the air cylinder. It is compulsory for the user and to wear eye & ear protection when filling the air cylinder.

3. While filling in the air cylinder; the pressure in the air cylinder must be monitored from the air gauge of the hand pump or scuba charging kit. Do not look at the air gauge on the air cylinder during filling process. Instead, reference the gauge on your fill device.

Assemble the filling equipment hose with the filling probe that is provided inside the box. Pull back on the outer sleeve on the quick connect fitting to release it from your airgun, when your tube is filled. If you hear SOUND of air during the first filling, move the probe and enable the O rings to be air-proof. (if the leakage continues, O rings might be deformed)

If the Air-Pressure on your airgun is below 30 bar, there might be air leakage preventing to continue shooting. This is not a problem; you may re-fill the air cylinder and continue shooting.

B. LOADING THE AIRGUN

CAUTION: Never re-use ammunition.

Review the entire manual, including the section on Safety, before firing your airgun.

CAUTION: Know your airgun's loading mechanism for safest use! Pellets can either be loaded one by one using a single shot tray, or multiple pellets may be loaded using the rotary magazine. With the magazine placed correctly, EVERY action of closing the side lever WILL place a pellet into the chamber.

DO NOT TRY TO CLOSE THE SIDE LEVER WHEN THE MAGAZINE IS NOT LOADED!!!

Do not re-cock the airgun while there is pellet loaded inside the chamber!! This will load multiple pellets at the same time and may damage your airgun.

Removal of the magazine WILL still leave the chambered pellet in place unless the airgun is fired.

Loading the Magazine

Make sure your airgun is on "SAFE" position and is pointed to a SAFE DIRECTION.



If the magazine is fitted on the airgun, remove it to begin loading or Unloading.

Move the clear cover over the catch point and rotate in the direction of the arrows (clockwise) Fig. A.

Place a finger under the magazine covering the hole, place the first pellet in the magazine nose first, make sure that the pellet does not protrude out of the magazine. If the pellet does protrude, simply push the pellet inward. Fig. B

Rotate the cover counterclockwise and place the remaining pellets into the magazine. Upon completion rotate the cover until it comes to rest. Fig. C

If it looks like Fig. D. The magazine is now ready for use.

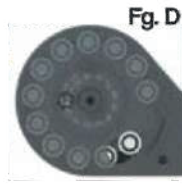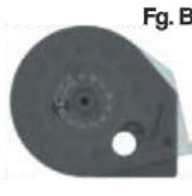

Placing the loaded Magazine on the Airgun & Firing Safety

NOTE: Following these directions will load your airgun and it will be ready to FIRE.

Make sure your airgun is on "SAFE" position and is pointed to a SAFE DIRECTION.

- To fit the magazine into the airgun, pull the cocking handle backwards until it stops.
- With the cover of the magazine facing the butt of the airgun, insert the magazine from the right side and push it inward until it snaps into place.
- The line on the back of the magazine should align with the line on the loading slot of the airgun.

YOU WILL DAMAGE THE MAGAZINE IF IT IS NOT PLACED CORRECTLY

- Pull the cocking handle to its rear-most position.
- Push the cocking handle forward fully and ensure that it lays flat against the airgun in order to chamber a pellet.
- After following these steps and reading the entire manual, including the section of safety procedures, your airgun is now loaded and ready to fire.

DO NOT CLOSE THE COCKING HANDLE / MAGAZINE RELEASE BOLT UNTIL YOU ARE READY TO FIRE.

- Aim at your intended target and disengage the safety and prepare to shoot.
- Pull the trigger gently and the airgun will fire.
- To reload the airgun, pull the cocking handle to its rear-most position. This will index the magazine and align the next pellet with the barrel. Then, repeat previous steps.



C. UN-LOADING & UN-COCKING THE AIRGUN

Un-Loading & Removing the Magazine

1. Pulling the cocking handle to its rear most position and Pushing it forward fully while the magazine is loaded will result in chambering a pellet.
2. To unload the airgun, it is recommended to fire the pellet in a **SAFE DIRECTION**.
3. Pull the side lever back to the rear position.

CAUTION: This action will rack the airgun.

4. Push the magazine out of the receiver from the left side.
5. Un-cock the airgun for safe storage.

Un-Cocking

When you are finished shooting, remove the magazine as instructed and un-cock the airgun by following the steps below:

1. Point the airgun in a **SAFE DIRECTION**.
2. Take the airgun on 'FIRE' position.
3. Pull the cocking handle back to its rear-most position.
4. While firmly holding the cocking handle in the rear position, pull the trigger.
5. Continue to hold the trigger back while sliding the side lever forward to the latched position.
6. Release the trigger.
7. Push the airgun on 'SAFE' position.

WARNING: EVEN THOUGH YOU FOLLOW THE UNLOADING PROCEDURE, CONTINUE TO TREAT THE AIRGUN AS IT IS LOADED. NEVER POINT THE AIRGUN AT ANYTHING YOU DO NOT INTEND TO SHOOT.

D. JAMMED AMMO

A jammed ammo is usually caused by firing the airgun when the air pressure is too low. Please, do not operate your airgun below 100 bar (1500 PSI) air pressure.

CAUTION: Never try to look through the barrel to see if a jammed ammo is cleared.

Make sure the airgun is on "SAFE" position and pointed in a SAFE DIRECTION.

- Pull the cocking handle back to its rear-most position.
- Insert a clearing rod of the proper size into the barrel, starting from the muzzle (Barrel may be damaged if the clearing rod is not proper size)

NOTE: Cocking handle must be at its rear-most position for the jammed ammo to clear the breech when it is pushed out by the ramrod.

- Push or tap ammo towards the breech end of the barrel until the pellet is extracted from the chamber.
- Operate carefully in order not to damage the chamber sealing O-ring.
- Remove and discard the ammo.
- Do not reuse that ammo.

If you are not successful removing the jammed ammo following above instructions, take no further action. REXIMEX Technical Service or an Authorized Service Station will unjam your airgun (Free of charge during the warranty period).

F. TRIGGER ADJUSTMENT

- Trigger sensitivity adjustment may be done using an Allen wrench from next to the trigger, as shown on the picture



F. DETACHABLE STOCK

- Attach and Detach easily as shown on the figure.



WARNING! DO NOT MODIFY OR ALTER YOUR AIRGUN. ATTEMPTS TO MODIFY THE AIRGUN IN ANY WAY INCONSISTENT WITH THIS MANUAL MAY MAKE YOUR AIRGUN UNSAFE TO USE, CAUSE SERIOUS INJURY OR DEATH, AND WILL MAKE THE WARRANTY INACTIVE.

WARNING! DO NOT ATTEMPT TO REPAIR YOUR AIRGUN OR TO DISASSEMBLE TO CORRECT AN OVER-FILL OR VALVE LOCK. PARTS MAY FLY OUT FROM THE AIRGUN AT DANGEROUS SPEEDS IF IT IS DISASSEMBLED WHILE PRESSURIZED.

G. REGULATOR SETTINGS

- Remove the air tube at the bottom.

ATTENTION! There may be air leakage when removing the tube. Remove as quickly as possible to lower the leakage.

- To release the air in the regulator, pull the cocking lever and press the trigger. (Continue this process until the air in the regulator is completely released.)

ATTENTION! Do not adjust the regulator before completely releasing the air in the regulator. If you do, O rings may be damaged



H. MAINTENANCE

- Apply flex/mex silicone chamber oil to the barrel breech and O-rings every 3 months or 500 shots.
- Periodically check your airgun. If anything feels different, like a shorter or weaker trigger pull, this may mean worn out or broken parts, call flex/mex customer service for assistance before reusing your airgun.

REPLACEMENT OF O-RINGS

After a period of time, the O-rings on the fill probe will need to be replaced. The need for this will be somewhat noticeable if air is heard leaking from the nozzle while charging the airgun.

LUBRICANT

General: Keep the airgun clean and wipe it off with regular gun oil and a cloth occasionally.

Fill probe: Apply a thin layer of suitable mineral based oil occasionally or when dried out.

Magazines: Apply a thin layer of suitable mineral based oil occasionally or when dried out.

Cocking handle and Sidelever Sliding Surface: Apply a thin layer of a standard multipurpose grease occasionally or when dried out.

WARNING: Never use grease or spray oil in the moving parts inside the gun. This can result in unstable power and also leakage. Be moderate with lubricant.

I. STORAGE

Store in a place that is dry and dark. Store with air pressure between 150-200 bar in the air gun.

WARNING!

- Keep away from spaces with high humidity as steel parts might corrode.
- Keep away from bright sunlight as this shortens the life of the O-rings.
- Never store the air gun loaded with pellets.




Part Code	Part Name	Part Code	Part Name
RP - 1-1-1	RP Air Tube	RP - 3-1-71	Hammer Valve Front Part
RP - 1-1-2	RP Air Tube Rear Tap	RP - 3-1-72	Hammer Valve Back Part
RP - 1-1-4	RP Air Tube Valve Spring Base	RP - 4-1-1	RP Synthetic Stock
RP - 1-1-5	RP Air Tube Valve Spring	RP - 4-1-2	RP Synthetic Stock Button
RP - 1-1-6	RP Air Tube Valve	RP - 4-1-3	RP Synthetic Stock Button Spring
RP - 1-1-11	RP Barometer Sleeve	RP - 4-1-6	RP Butt Pad
RP - 2-1-1	RP Barrel Shroud	RP - 4-1-8	RP Synthetic Hand Grip Lower Lid
RP - 2-1-5	RP Front Sight Base	RP - 4-1-11	RP Synthetic Handgrip
RP - 2-1-6	RP Front Sight	RP-Mag	RP Magazine*
RP - 2-1-7	RP Silencer Adapter	RB - 1-1	Air Tank Baromeer
RP - 3-1-1*	RP Barrel *	Seg-In-d11	d11 Internal Snapping
RP - 3-1-6	Adjustable Rear Sight Body	Seg-Out-d2.5	d2.5 Outer Snapping
RP - 3-1-8	RP Magazine Side Stop	1A-002	M3x3 Flat Point SetScrew (ISO-4026)
RP - 3-1-10	RP Top Cover	1A-008	M4x4 Flat Point SetScrew (ISO-4026)
RP - 3-1-14	RP Cocking Lever Counter Pin Spring	1A-009	M4x6 Flat Point SetScrew (ISO-4026)
RP - 3-1-15	RP Cocking Lever Counter Pin	1A-014	M5x6 Flat Point SetScrew (ISO-4026)
RP - 3-1-19	RP Cocking Lever Link Rear Pin	1A-018	M6x6 Flat Point SetScrew (ISO-4026)
RP - 3-1-20	RP Cocking Lever	1E-002	M4x9 - Ball Point SetScrew
RP - 3-1-23	RP Cocking Lever Link	2A-001	O-Ring - 2x1 NBR70
RP - 3-1-24	RP Cocking Lever Link Front Pin	2A-003	O-Ring - 3.5x1.5 NBR70
RP - 3-1-25	RP Counter Wedge Pin	2A-005	O-Ring - 3x1.5 NBR70
RP - 3-1-26*	RP Pellet Pusher *	2A-006	O-Ring - 3x1.5 NBR90
RP - 3-1-28	RP Safety Catch Spring	2A-012*	O-Ring - 5.5x1.5 NBR70 *
RP - 3-1-32	RP Side Cover	2A-016	O-Ring - 9x1.5 NBR70
RP - 3-1-33	RP Safety Button	2A-034	O-Ring - 25,3x2 NBR70
RP - 3-1-34	RP Trigger Finger Piece	2A-037	O-Ring - 13x1.5 NBR70
RP - 3-1-35	RP Trigger Finger Piece Spring	2A-038	O-Ring - 7x2 NBR70
RP - 3-1-37	RP Hammer Holder Sear Spring	2A-040	O-Ring - 8x1 NBR70
RP - 3-1-38	RP Hammer Holder Sear	2A-041	O-Ring - 2,98x1,78 NBR70
RP - 3-1-40	RP Hammer Holder Spring	2B-003	O-Ring - 3.5x1.5 NBR90
RP - 3-1-41	RP Hammer Holder	2B-017	O-Ring - 9x2 NBR90
RP - 3-1-43	RP Hammer Spring Base	2B-032	O-Ring - 20x3 NBR90
RP - 3-1-44	RP Hammer Spring	3A-002	M3x10 Socket Head Screw (ISO-4762)
RP - 3-1-45	RP Hammer	3A-004	M3x16 Socket Head Screw (ISO-4762)
RP - 3-1-49	RP Hammer Valve Spring	3A-021	M5x10 Socket Head Screw (ISO-4762)
RP - 3-1-50	RP Hammer Valve Spring Base	3A-033	M4x35 Socket Head Screw (ISO-4762)
RP - 3-1-52	RP Regulator Adjustable Base	3B-002	M3x6 Socket Countersunk Head Screw (ISO-10642)
RP - 3-1-53	RP Regulator Adjustment Screw	3B-010	M4x12 Socket Countersunk Head Screw (ISO-10642)
RP - 3-1-58	RP Regulator Disk Spring	4A-003	2x6 Parallel Pin (ISO-8734)
RP - 3-1-59	RP Regulator Valve Polymer Pad	4A-006	2x10 Parallel Pin (ISO-8734)
RP - 3-1-60	RP Regulator Valve	4A-008	2x14 Parallel Pin (ISO-8734)
RP - 3-1-66	Rp Regulator Body	4A-025	3x22 Parallel Pin (ISO-8734)
RP - 3-1-67	RP Chassis	4A-032	4x24Parallel Pin (ISO-8734)
RP - 3-1-69	Adjustable Rear Sight Inner Piece	8A-003	D3 Steel Ball
RP - 3-1-70	RP Adjustable Rear Sight Screw		

Please explicitly specify following information when ordering spare parts;
1) "Part Code" that's seen in this drawing
2) "Draw Date" of this exploded view (on the right top corner of the page)
3) "Caliber" information for parts with an "RP-Mag"

Drawn On: Sep 10th, 2024
Resim Tarihi: 10 Eylül 2024

* Please explicitly specify Caliber when ordering following parts;

4.5 mm	5.5 mm
RP - 3-1-1 / 4.5	RP - 3-1-1 / 5.5
RP - 3-1-26 / 4.5	RP - 3-1-26 / 5.5
2A-042	2A-012
RP-Mag / 4.5	RP-Mag / 5.5

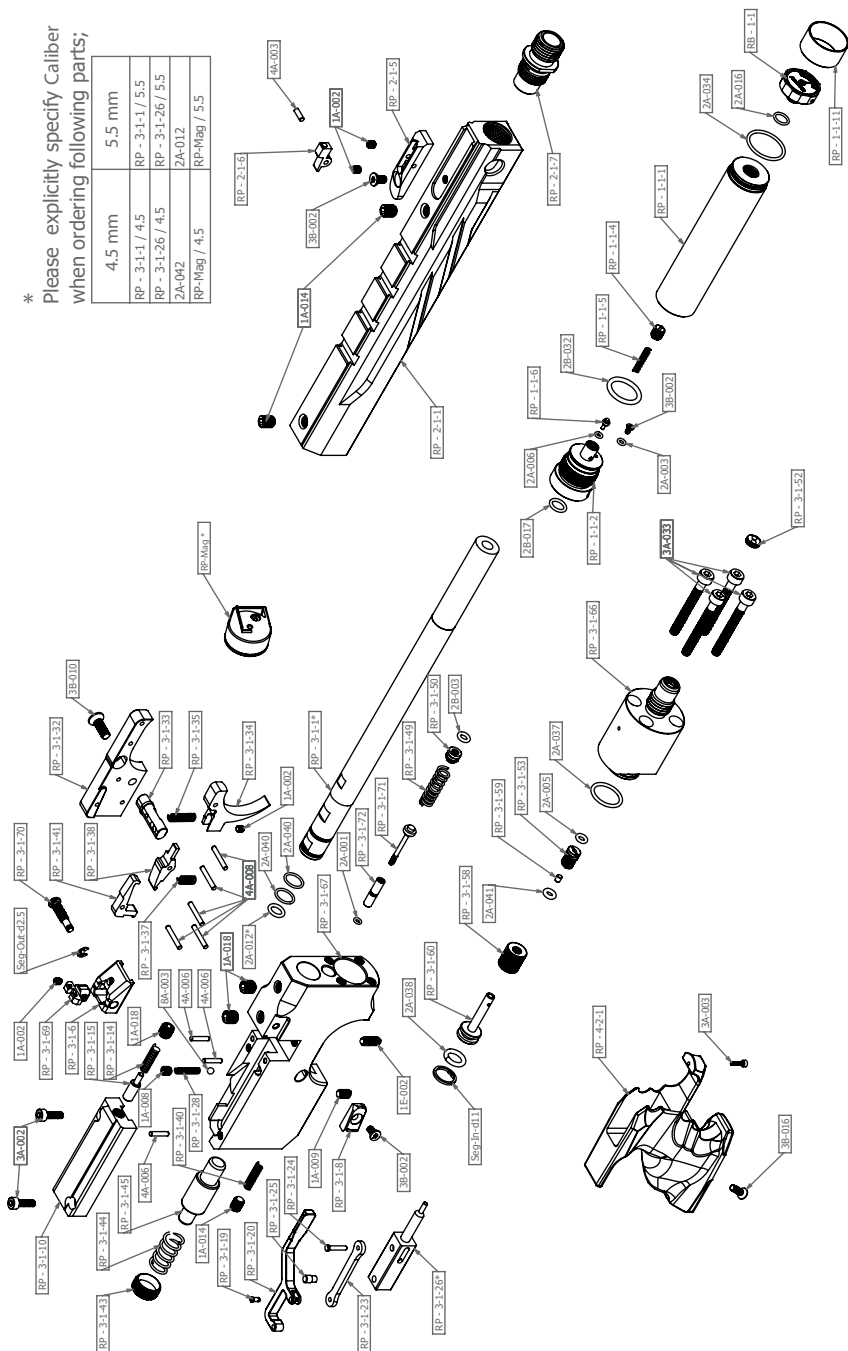

Part Code	Part Name	Part Code	Part Name
RP - 1-1-1	RP Air Tube	RP - 3-1-67	RP Chassis
RP - 1-1-2	RP Air Tube Rear Tap	RP - 3-1-69	Adjustable Rear Sight Inner Piece
RP - 1-1-4	RP Air Tube Valve Spring Base	RP - 3-1-70	RP Adjustable Rear Sight Screw
RP - 1-1-5	RP Air Tube Valve Spring	RP - 3-1-71	Hammer Valve Front Part
RP - 1-1-6	RP Air Tube Valve	RP - 3-1-72	Hammer Valve Back Part
RP - 1-1-11	RP Barometer Sleeve	RP - 4-2-1	RPA Wood Handgrip
RP - 2-1-1	RP Barrel Shroud	RP-Mag	RP Magazine*
RP - 2-1-5	RP Front Sight Base	RB - 1-1	Air Tank Baromeer
RP - 2-1-6	RP Front Sight	Seg-In-d11	d11 Internal Snapping
RP - 2-1-7	RP Silencer Adapter	Seg-Out-d2.5	d2.5 Outer Snapping
RP - 3-1-1*	RP Barrel *	1A-002	M3x3 Flat Point SetScrew (ISO-4026)
RP - 3-1-6	Adjustable Rear Sight Body	1A-008	M4x4 Flat Point SetScrew (ISO-4026)
RP - 3-1-8	RP Magazine Side Stop	1A-009	M4x6 Flat Point SetScrew (ISO-4026)
RP - 3-1-10	RP Top Cover	1A-014	M5x6 Flat Point SetScrew (ISO-4026)
RP - 3-1-14	RP Cocking Lever Counter Pin Spring	1A-018	M6x6 Flat Point SetScrew (ISO-4026)
RP - 3-1-15	RP Cocking Lever Counter Pin	1E-002	M4x9 - Ball Point SetScrew
RP - 3-1-19	RP Cocking Lever Link Rear Pin	2A-001	O-Ring - 2x1 NBR70
RP - 3-1-20	RP Cocking Lever	2A-003	O-Ring - 3.5x1.5 NBR70
RP - 3-1-23	RP Cocking Lever Link	2A-005	O-Ring - 3x1.5 NBR70
RP - 3-1-24	RP Cocking Lever Link Front Pin	2A-006	O-Ring - 3x1.5 NBR90
RP - 3-1-25	RP Counter Wedge Pin	2A-012*	O-Ring - 5.5x1.5 NBR70 *
RP - 3-1-26*	RP Pellet Pusher *	2A-016	O-Ring - 9x1.5 NBR70
RP - 3-1-28	RP Safety Catch Spring	2A-034	O-Ring - 25,3x2 NBR70
RP - 3-1-32	RP Side Cover	2A-037	O-Ring - 13x1.5 NBR70
RP - 3-1-33	RP Safety Button	2A-038	O-Ring - 7x2 NBR70
RP - 3-1-34	RP Trigger Finger Piece	2A-040	O-Ring - 8x1 NBR70
RP - 3-1-35	RP Trigger Finger Piece Spring	2A-041	O-Ring - 2,98x1,78 NBR70
RP - 3-1-37	RP Hammer Holder Sear Spring	2B-003	O-Ring - 3.5x1.5 NBR90
RP - 3-1-38	RP Hammer Holder Sear	2B-017	O-Ring - 9x2 NBR90
RP - 3-1-40	RP Hammer Holder Spring	2B-032	O-Ring - 20x3 NBR90
RP - 3-1-41	RP Hammer Holder	3A-002	M3x10 Socket Head Screw (ISO-4762)
RP - 3-1-43	RP Hammer Spring Base	3A-003	M3x12 Socket Head Screw (ISO-4762)
RP - 3-1-44	RP Hammer Spring	3A-033	M4x35 Socket Head Screw (ISO-4762)
RP - 3-1-45	RP Hammer	3B-002	M3x6 Socket Countersunk Head Screw (ISO-10642)
RP - 3-1-49	RP Hammer Valve Spring	3B-010	M4x12 Socket Countersunk Head Screw (ISO-10642)
RP - 3-1-50	RP Hammer Valve Spring Base	3B-016	M5x16 Socket Countersunk Head Screw (ISO-10642)
RP - 3-1-52	RP Regulator Adjustable Base	4A-003	2x6 Parallel Pin (ISO-8734)
RP - 3-1-53	RP Regulator Adjustment Screw	4A-006	2x10 Parallel Pin (ISO-8734)
RP - 3-1-58	RP Regulator Disk Spring	4A-008	2x14 Parallel Pin (ISO-8734)
RP - 3-1-59	RP Regulator Valve Polymer Pad	8A-003	D3 Steel Ball
RP - 3-1-60	RP Regulator Valve		
RP - 3-1-66	Rp Regulator Body		


Please explicitly specify following information when ordering spare parts;

- 1) "Part Code" that's seen in this drawing
- 2) "Draw Date" of this exploded view (on the right top corner of the page)
- 3) "Caliber" information for parts with an "x."

Drawn On: June 11nd 2026
Resim Tarihi: 11 Haziran 2026

* Please explicitly specify Caliber when ordering following parts;

4.5 mm	5.5 mm
RP - 3-1-1 / 4.5	RP - 3-1-1 / 5.5
RP - 3-1-26 / 4.5	RP - 3-1-26 / 5.5
2A-42	2A-012
RP-Mag / 4.5	RP-Mag / 5.5

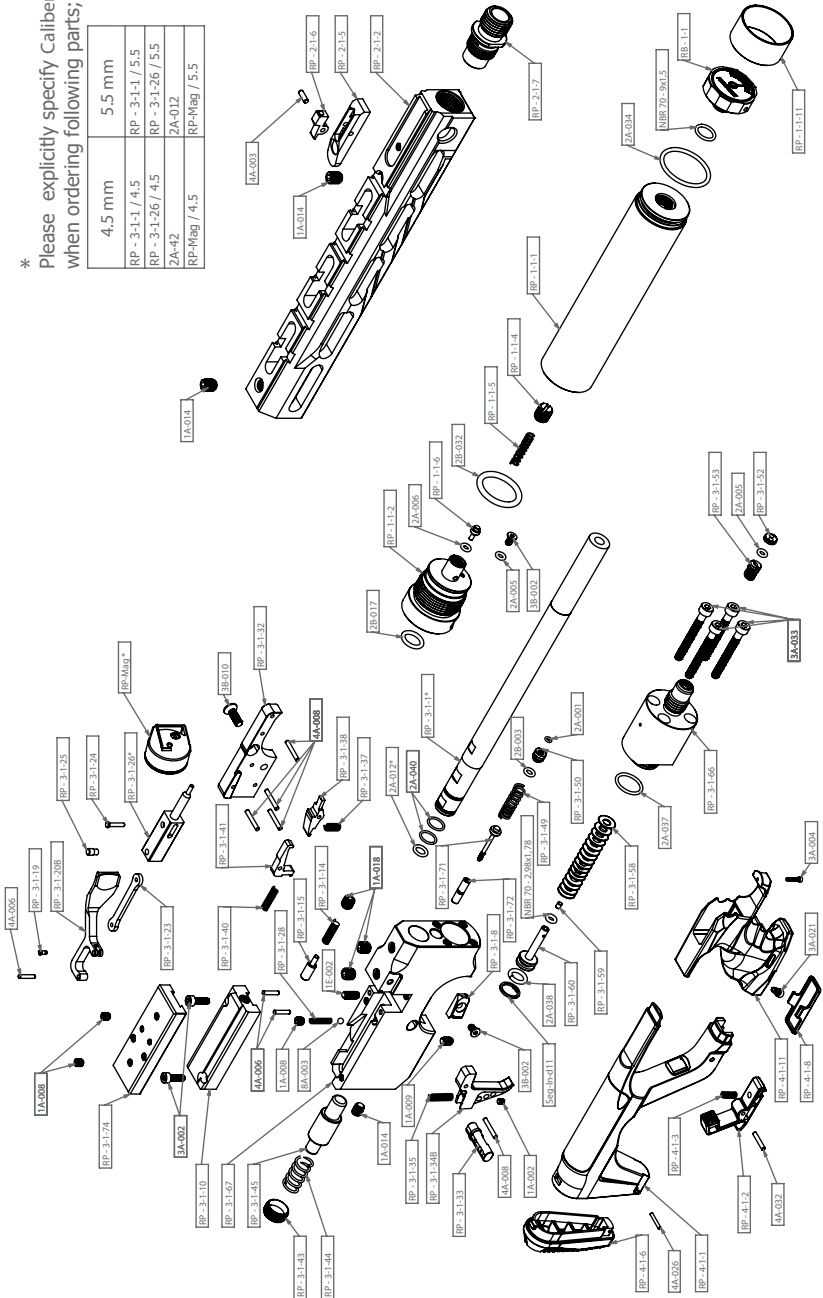


Part Code	Part Name	Part Code	Part Name
RP - 1-1-1	RP Air Tube	RP - 3-1-72	Hammer Valve Back Part
RP - 1-1-2	RP Air Tube Rear Tap	RP - 3-1-74	RP Race Red Dot Plate
RP - 1-1-4	RP Air Tube Valve Spring Base	RP - 4-1-1	RP Synthetic Stock
RP - 1-1-5	RP Air Tube Valve Spring	RP - 4-1-2	RP Synthetic Stock Button
RP - 1-1-6	RP Air Tube Valve	RP - 4-1-3	RP Synthetic Stock Button Spring
RP - 1-1-11	RP Barometer Sleeve	RP - 4-1-6	RP Butt Pad
RP - 2-1-2	RP Race Barrel Shroud	RP - 4-1-8	RP Synthetic Hand Grip Lower Lid
RP - 2-1-5	RP Front Sight Base	RP - 4-1-11	RP Synthetic Handgrip
RP - 2-1-6	RP Front Sight	RP-Mag	RP Magazine*
RP - 2-1-7	RP Silencer Adapter	RB - 1-1	Air Tank Baromeer
RP - 3-1-1	RP Barrel *	Seg-In-d11	D11 Internal Snapping
RP - 3-1-8	RP Magazine Side Stop	1A-002	M3x3 Flat Point SetScrew (ISO-4026)
RP - 3-1-10	RP Top Cover	1A-008	M4x4 Flat Point SetScrew (ISO-4026)
RP - 3-1-14	RP Cocking Lever Counter Pin Spring	1A-009	M4x6 Flat Point SetScrew (ISO-4026)
RP - 3-1-15	RP Cocking Lever Counter Pin	1A-014	M5x6 Flat Point SetScrew (ISO-4026)
RP - 3-1-19	RP Cocking Lever Link Rear Pin	1A-018	M6x6 Flat Point SetScrew (ISO-4026)
RP - 3-1-20B	RP Race Cocking Lever	1E-002	M4x9 - Ball Point SetScrew
RP - 3-1-23	RP Cocking Lever Link	2A-001	O-Ring - 2x1 NBR70
RP - 3-1-24	RP Cocking Lever Link Front Pin	2A-003	O-Ring - 3.5x1.5 NBR70
RP - 3-1-25	RP Counter Wedge Pin	2A-005	O-Ring - 3x1.5 NBR70
RP - 3-1-26*	RP Pellet Pusher *	2A-012*	O-Ring - 5.5x1.5 NBR70 *
RP - 3-1-28	RP Safety Catch Spring	2A-016	O-Ring - 9x1.5 NBR70
RP - 3-1-32	RP Side Cover	2A-034	O-Ring - 25,3x2 NBR70
RP - 3-1-33	RP Safety Button	2A-037	O-Ring - 13x1.5 NBR70
RP - 3-1-34B	RP Race Trigger Finger Piece	2A-038	O-Ring - 7x2 NBR70
RP - 3-1-35	RP Trigger Finger Piece Spring	2A-040	O-Ring - 8x1 NBR70
RP - 3-1-37	RP Hammer Holder Sear Spring	2A-041	O-Ring - 2,98x1,78 NBR70
RP - 3-1-38	RP Hammer Holder Sear	2B-003	O-Ring - 3.5x1.5 NBR90
RP - 3-1-40	RP Hammer Holder Spring	2B-017	O-Ring - 9x2 NBR90
RP - 3-1-41	RP Hammer Holder	2B-032	O-Ring - 20x3 NBR90
RP - 3-1-43	RP Hammer Spring Base	3A-002	M3x10 Socket Head Screw (ISO-4762)
RP - 3-1-44	RP Hammer Spring	3A-004	M3x16 Socket Head Screw (ISO-4762)
RP - 3-1-45	RP Hammer	3A-021	M5x10 Socket Head Screw (ISO-4762)
RP - 3-1-49	RP Hammer Valve Spring	3A-033	M4x35 Socket Head Screw (ISO-4762)
RP - 3-1-50	RP Hammer Valve Spring Base	3B-002	M3x6 Socket Countersunk Head Screw (ISO-10642)
RP - 3-1-52	RP Regulator Adjustable Base	3B-010	M4x12 Socket Countersunk Head Screw (ISO-10642)
RP - 3-1-53	RP Regulator Adjustment Screw	4A-003	2x6 Parallel Pin (ISO-8734)
RP - 3-1-58	RP Regulator Disk Spring	4A-006	2x10 Parallel Pin (ISO-8734)
RP - 3-1-59	RP Regulator Valve Polymer Pad	4A-008	2x14 Parallel Pin (ISO-8734)
RP - 3-1-60	RP Regulator Valve	4A-026	3x22 Parallel Pin (ISO-8734)
RP - 3-1-66	Rp Regulator Body	4A-032	4x24Parallel Pin (ISO-8734)
RP - 3-1-67	RP Chassis	8A-003	D3 Steel Ball
RP - 3-1-71	Hammer Valve Front Part		

Please explicitly specify following information when ordering spare parts;

- 1) "Part Code" that's seen in this drawing
- 2) "Draw Date" of this exploded view (on the right top corner of the page)
- 3) "Caliber" information for parts with an ".45"

Drawn On: June 12th, 2026
Resim Tarihi: 12 Haziran 2026

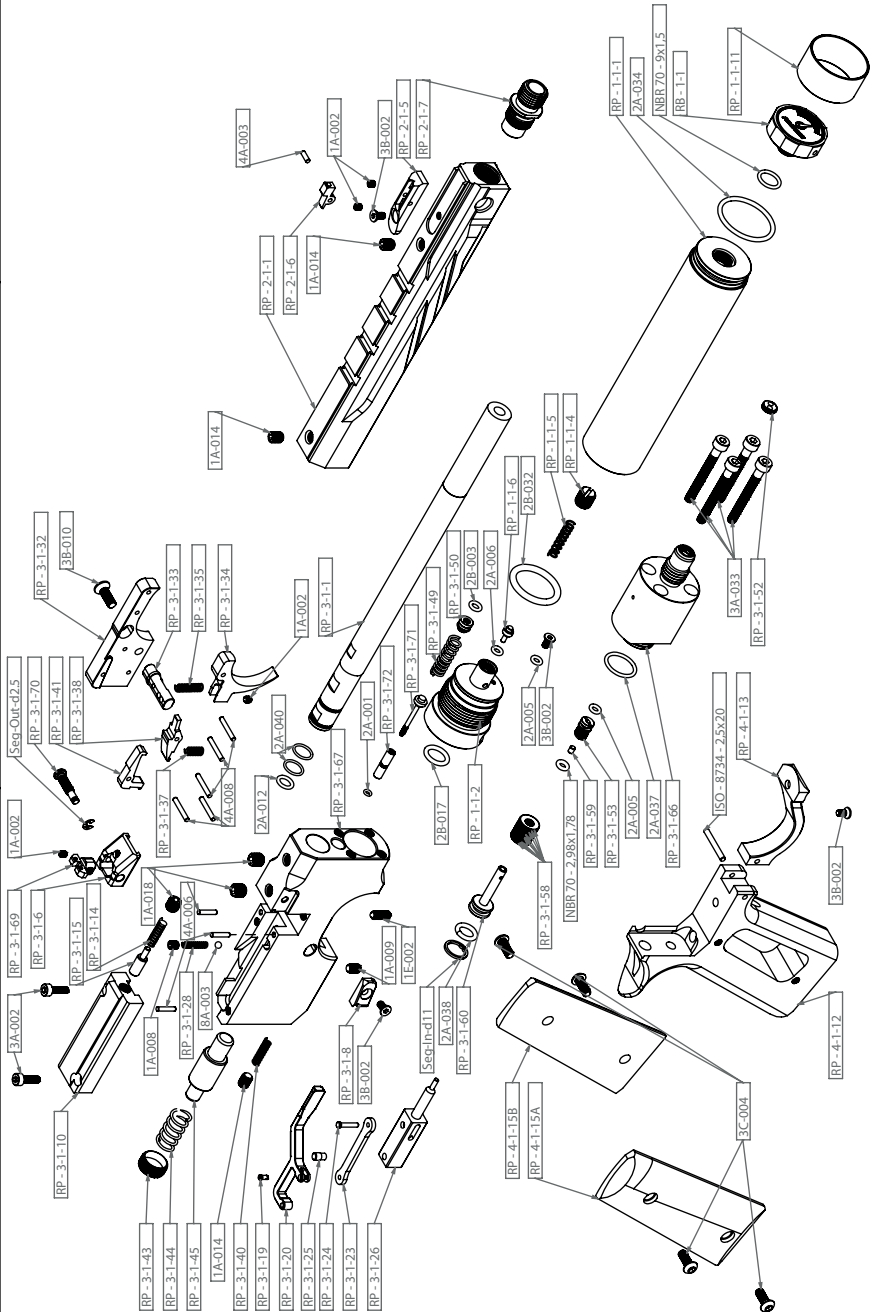

Part Code	Part Name	Part Code	Part Name
RP - 1-1-1	RP Air Tube	RP - 3-1-67	RP Chassis
RP - 1-1-2	RP Air Tube Rear Tap	RP - 3-1-69	RP Adjustable Rear Sight Inner Piece
RP - 1-1-4	RP Air Tube Valve Spring Base	RP - 3-1-70	RP Adjustable Rear Sight Screw
RP - 1-1-5	RP Air Tube Valve Spring	RP - 3-1-71	Hammer Valve Front Part
RP - 1-1-6	RP Air Tube Valve	RP - 3-1-72	Hammer Valve Back Part
RP - 1-1-11	RP Barometer Sleeve	RB - 1-1	Air Tank Baromeer
RP - 2-1-1	RP Race Barrel Shroud	RP - 4-1-12	RP 11 Handgrip
RP - 2-1-5	RP Front Sight Base	RP - 4-1-13	RP 11 Trigger Guard
RP - 2-1-6	RP Front Sight	RP - 4-1-15A	RP 11 Handgrip Cover Right
RP - 2-1-7	RP Silencer Adapter	RP - 4-4-15B	RP 11 Handgrip Cover Left
RP - 3-1-1	RP Barrel	Seg-In-d11	d11 Internal Snapping
RP - 3-1-6	RP Adjustable Rear Sight Body	Seg-Out-d2.5	d2.5 Outer Snapping
RP - 3-1-8	RP Magazine Side Stop	1A-002	M3x3 Flat Point SetScrew (ISO-4026)
RP - 3-1-10	RP Top Cover	1A-008	M4x4 Flat Point SetScrew (ISO-4026)
RP - 3-1-14	RP Cocking Lever Counter Pin Spring	1A-009	M4x6 Flat Point SetScrew (ISO-4026)
RP - 3-1-15	RP Cocking Lever Counter Pin	1A-014	M5x6 Flat Point SetScrew (ISO-4026)
RP - 3-1-19	RP Cocking Lever Link Rear Pin	1A-018	M6x6 Flat Point SetScrew (ISO-4026)
RP - 3-1-20	RP Race Cocking Lever	1E-002	M4x9 - Ball Point SetScrew
RP - 3-1-23	RP Cocking Lever Link	2A-001	O-Ring - 2x1 NBR70
RP - 3-1-24	RP Cocking Lever Link Front Pin	2A-005	O-Ring - 3x1.5 NBR70
RP - 3-1-25	RP Counter Wedge Pin	2A-006	O-Ring - 3x1,5 NBR90
RP - 3-1-26	RP Pellet Pusher	2A-012	O-Ring - 5.5x1.5 NBR70
RP - 3-1-28	RP Safety Catch Spring	2A-034	O-Ring - 25,3x2 NBR70
RP - 3-1-32	RP Side Cover	2A-037	O-Ring - 13x1.5 NBR70
RP - 3-1-33	RP Safety Button	2A-038	O-Ring - 7x2 NBR70
RP - 3-1-34	RP Race Trigger Finger Piece	2A-040	O-Ring - 8x1 NBR70
RP - 3-1-35	RP Trigger Finger Piece Spring	2B-003	O-Ring - 3.5x1.5 NBR90
RP - 3-1-37	RP Hammer Holder Sear Spring	2B-017	O-Ring - 9x2 NBR90
RP - 3-1-38	RP Hammer Holder Sear	2B-032	O-Ring - 20x3 NBR90
RP - 3-1-40	RP Hammer Holder Spring	3A-002	M3x10 Socket Head Screw (ISO-4762)
RP - 3-1-41	RP Hammer Holder	3A-033	M4x35 Socket Head Screw (ISO-4762)
RP - 3-1-43	RP Hammer Spring Base	3B-002	M3x6 Socket Countersunk Head Screw (ISO-10642)
RP - 3-1-44	RP Hammer Spring	3B-010	M4x12 Socket Countersunk Head Screw (ISO-10642)
RP - 3-1-45	RP Hammer	3C-004	M4x10 Hexagon Socket Button Head Screw (ISO-7045)
RP - 3-1-49	RP Hammer Valve Spring	4A-003	2x6 Parallel Pin (ISO-8734)
RP - 3-1-50	RP Hammer Valve Spring Base	4A-006	2x10 Parallel Pin (ISO-8734)
RP - 3-1-52	RP Regulator Adjustable Base	4A-008	2x14 Parallel Pin (ISO-8734)
RP - 3-1-53	RP Regulator Adjustment Screw	8A-003	D3 Steel Ball
RP - 3-1-58	RP Regulator Disk Spring	ISO - 8734 -2,5x20	2,5x20 Parallel Pin (ISO-8734)
RP - 3-1-59	RP Regulator Valve Polymer Pad	NBR 70 - 2,98x1,78	NBR 70 - 2,98x1,78 O-Ring
RP - 3-1-60	RP Regulator Valve	NBR 70 - 9x1,5	NBR 70 - 9x1,5 O-Ring
RP - 3-1-66	Rp Regulator Body		

NOTES



REXIMEX İt. İh. Av Malz. Sav. San. Tic. Ltd. Şti.

📍 Bayaşıar Mahallesi 41958. Sokak No:3 Beyşehir / Konya

☎ 0332 511 0055 ✉ export@reximex.com

🌐 www.reximex.com

