



reximex



DAYSTAR

PCP AIRGUN OWNERS MANUAL

.177 Cal. - .22 Cal. - .25 Cal

**READ ALL INSTRUCTIONS AND WARNINGS
IN THIS MANUAL BEFORE USING THIS AIRGUN**

INDEX



<u>Page</u>	<u>Content</u>
1	Warranty
1	Warning
2	Safety Review
3	General Instructions & Operating Safety
3	Manual Safety
4	Operating Instructions
4	A. Filling The Air Cylinder
5	B. Loading The Airgun
7	C. Un-Loading & Un-Chocking The Airgun
7	D. Cocking Lever Replacement
8	E. Jammed Ammo
8	F. Trigger Adjustment
9	G. Butt-Pad & Cheek Piece Adjustment
9	H. Maintenance
10	Replacement Of O-Rings
10	I. Storage
11	Mechanism Part's & Part Numbers

1. WARRANTY

All REXIMEX PCP Airguns carry a One Year Warranty against faulty workmanship and defective materials. Contact the dealer from which you purchased the airgun if it becomes necessary. If the airgun develops a defect within the warranty period, contact the dealer from whom it was purchased. The guarantee does not cover any damage caused by tampering with the airgun.

This airgun should only be disassembled by factory-authorized repairmen.

2. WARNING!

WARNING! NOT A TOY. THIS AIRGUN IS RECOMMENDED FOR ADULT USE ONLY. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH. MAY BE DANGEROUS UP TO 800 YARDS (732 METERS).

WARNING! DO NOT BRANDISH OR DISPLAY THIS AIRGUN IN PUBLIC. IT MAY CONFUSE PEOPLE AND MAY BE A CRIME.

DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. POLICE AND OTHERS MAY THINK IT IS A FIREARM AND IT MAY BE A CRIME.

YOU AND OTHERS NEXT TO YOU SHOULD ALWAYS WEAR SHOOTING GLASSES TO PROTECT YOUR EYES.

BUYERS AND USERS HAVE TO OBEY THE LAWS ABOUT THE USE AND OWNERSHIP OF THIS AIRGUN

WARNING! NEVER ATTEMPT TO DISASSEMBLE THIS AIRGUN WHILE IT IS CHARGED!
FAILURE TO OBEY THIS INSTRUCTION COULD RESULT IN PERSONAL INJURY OR DAMAGE TO THE AIRGUN!

3 SAFETY REVIEW

- Never use the airgun if you are intoxicated or under the influence of drugs.
- Even if there is no pressure sign on the manometer, never disassemble the pressurized tube!
- Never fire the airgun when it is empty of air or when the air cylinder is removed!
- Never point the airgun at anyone, or allow anyone to point an airgun at you!
- Treat every airgun as if it is loaded even if you know it is not loaded!
- Always carry the airgun so that the direction of the muzzle is under control, even if you stumble.
- Always be sure of your target and what lies behind it before firing your airgun.
- Never leave a loaded airgun unattended.
- Beware of targets that tend to cause ricochets.
- It is recommended that eye protection is worn when charging the air cylinder.
- Always use caution when operating this airgun.
- Only use dry cloth to clean any dirt inside the barrel for various reasons (humidity, dust, etc.)
- In your airgun, only use synthetic or mineral base high viscosity oil in order not to create filling effect with lower tolerance parts.
- Learn and obey the laws in your location.
- Be responsible in your use of this weapon!

REXIMEX PCP airguns are designed specifically for use with DRY COMPRESSED AIR. NO OTHER GAS OR GAS COMBINATION CAN BE USED.

The Airgun may be filled by a Diving Scuba Tank or a suitable compressor
MAXIMUM SAFE WORKING PRESSURE (SWP): 250 BAR



CAUTION!

DANGER OF EXPLOSION!

THE AIR TANK POSES THE EXPLOSION RISK IF IT GETS HEATED SUBJECT TO SUNTRAY FOR EXTENDED PERIOD OF TIME.

(Max. + 40° / Min. -05°)

OTHERWISE, THE AIRGUN SHOULD BE LEFT TO COOL DOWN IN A COOL ENVIRONMENT
RECOMMENDED TO BE TRANSPORTED UNDER MAXIMUM 80 BARS PRESSURE DURING FLIGHTS.

4 GENERAL INSTRUCTIONS & OPERATING SAFETY

- REXIMEX Airgun should be fitted with a scope or alternate optic sights before use.
- Before using your airgun, read and abide by the basic safety rules.



MANUAL SAFETY

CAUTION: Like all mechanical devices, airgun safety can fail. Even when the safety is on "SAFE" you should continue to handle the airgun in a safe manner.

Locate the safety switch of the airgun directly above the trigger guard. Safety switch can be set to "S" (SAFE) and "F" (FIRE) positions manually.

The Letters "S" (SAFE) and "F" (FIRE) are located below the safety switch.

A - Airgun on "S" (SAFE) Position

To set the safety on, push the safety switch from the left side of the airgun. In this position the trigger cannot be pulled and the airgun cannot be fired.

B - Airgun on "F" (FIRE) Position

To set the safety off, push the safety switch from the right side of the airgun. In this position the trigger can be pulled and the airgun can be fired.



WARNING! KEEP THE AIRGUN IN THE "SAFE" POSITION UNTIL YOU ARE READY TO SHOOT. WHEN READY PUSH THE SAFETY SWITCH TO "FIRE" POSITION

5. OPERATING INSTRUCTIONS

A. FILLING THE AIR CYLINDER

Warning!

1. Before filling the air cylinder; make sure the airgun is on "S" (SAFE) position, no pellets are loaded in the air airgun and/or barrel and magazine is not mounted in the gun.

NOTE: If the air cylinder pressure is at "0" Bar, then it will be necessary to cock the airgun to remove the force of the Hammer against the firing Valve. Otherwise, the air will pass through the firing Valve out the barrel, and the air cylinder will not pressurize.

2. Take all safety measures before filling the air cylinder. It is compulsory for the user and to wear eye & ear protection when filling the air cylinder.

3. While filling in the air cylinder; the pressure in the air cylinder must be monitored from the air gauge of the hand pump or scuba charging kit, Do not look at the air gauge on the air cylinder during filling process. Instead, reference the gauge on your fill device.



Assemble the filling equipment hose with the filling probe that is provided inside the box. Pull back on the outer sleeve on the quick connect fitting to release it from your airgun, when your tube is filled. If you hear SOUND of air during the first filling, move the jack and enable the O rings to be air-proof. (if the leakage continues, O rings might be deformed)

Overfill

In case of overfilling, PRESSURE SAFETY VALVE WASHER is located on your airgun. This washer will tear if the air pressure on your airgun reaches to a dangerous level and this will prevent any potential over pressure danger.

In case the safety valve washer is torn, a spare washer is included in your box and it needs to be changed.

B. LOADING THE AIRGUN

CAUTION: Never re-use ammunition.

Review the entire manual, including the section on Safety, before firing your airgun.

CAUTION: Know your airgun's loading mechanism for safest use! Pellets can either be loaded one by one using a single shot tray, or multiple pellets may be loaded using the rotary magazine. With the magazine placed correctly, EVERY action of closing the side lever WILL place a pellet into the chamber.

DO NOT TRY TO CLOSE THE SIDE LEVER WHEN THE MAGAZINE IS NOT LOADED!!!

Do not re-cock the airgun while there is pellet loaded inside the chamber!! This will load multiple pellets at the same time and may damage your airgun.

Removal of the magazine WILL still leave the chambered pellet in place unless the airgun is fired.

Loading the Magazine

Make sure your airgun is on "SAFE" position and is pointed to a SAFE DIRECTION.


If the magazine is fitted on the airgun, remove it to begin loading or Unloading.

Move the clear cover over the catch point and rotate in the direction of the arrows (clockwise) Fig. A.

Place a finger under the magazine covering the hole, place the first pellet in the magazine nose first, make sure that the pellet does not protrude out of the magazine. If the pellet does protrude, simply push the pellet inward. Fig. B

Rotate the cover counterclockwise and place the remaining pellets into the magazine. Upon completion rotate the cover until it comes to rest. Fig. C

If it looks like Fig. D. The magazine is now ready for use.

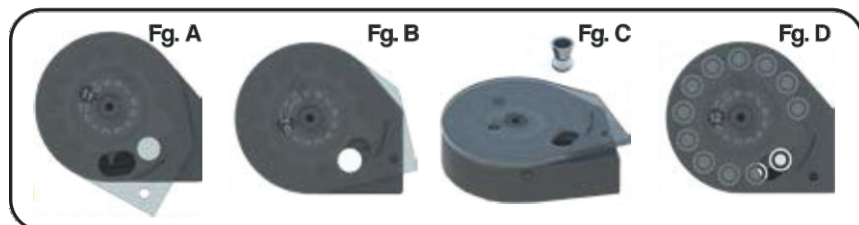

Placing the loaded Magazine on the Airgun & Firing Safety

NOTE: Following these directions will load your airgun and it will be ready to FIRE.

Make sure your airgun is on "SAFE" position and is pointed to a SAFE DIRECTION.

- To fit the magazine into the airgun, pull the cocking handle backwards until it stops.
- With the cover of the magazine facing the butt of the airgun, insert the magazine from the right side and push it inward until it snaps into place.
- The line on the back of the magazine should align with the line on the loading slot of the airgun. **YOU WILL DAMAGE THE MAGAZINE IF IT IS NOT PLACED CORRECTLY**
- Pull the cocking handle to its rear-most position.
- Push the cocking handle forward fully and ensure that it lays flat against the airgun in order to chamber a pellet.
- After following these steps and reading the entire manual, including the section of safety procedures, your airgun is now loaded and ready to fire.

DO NOT CLOSE THE COCKING HANDLE / MAGAZINE RELEASE BOLT UNTIL YOU ARE READY TO FIRE.

- Aim at your intended target and disengage the safety and prepare to shoot.
- Pull the trigger gently and the airgun will fire.
- To reload airgun, pull the cocking handle to its rear-most position. This will index the magazine and align the next pellet with the barrel. Then, repeat previous steps.



C. UN-LOADING & UN-COCKING THE AIRGUN

Un-loading & Removing the Magazine

1. Pulling the cocking handle to its rear-most position and Pushing it forward fully while the magazine is loaded will result in chambering a pellet.
2. To unload the airgun, it is recommended to fire the pellet in a **SAFE DIRECTION**.
3. Pull the side lever back to the rear position.

CAUTION. This action **WILL** cock the airgun.

4. Push the magazine out of the receiver from the left side.
5. Un-cock the airgun for safe storage.

Un-Cocking

When you are finished shooting, remove the magazine as instructed and un-cock the airgun by following the steps below:

1. Point the airgun in a **SAFE DIRECTION**.
2. Take the airgun on "FIRE" position.
3. Pull the cocking handle back to its rear-most position.
4. While firmly holding the cocking handle in the rear position, pull the trigger.
5. Continue to hold the trigger back while sliding the side lever forward to the latched position.
6. Release the trigger.
7. Put the airgun on "SAFE" position.

WARNING! EVEN THOUGH YOU FOLLOW THE UNLOADING PROCEDURE, CONTINUE TO TREAT THE AIRGUN AS IT IS LOADED. NEVER POINT THE AIRGUN AT ANYTHING YOU DO NOT INTEND TO SHOOT.

D. POWER ADJUSTMENT

Simply rotate the power switch while the airgun is un-cocked in the "+" or "-" direction and set the desired power level.



E. JAMMED AMMO

A jammed ammo is usually caused by firing the airgun when the air pressure is too low. Please, do not operate your airgun below 100 bar (1500 PSI) air pressure.

CAUTION: Never try to look through the barrel to see if a jammed ammo is cleared.

Make sure the airgun is on "SAFE" position and pointed in a SAFE DIRECTION.

- Pull the cocking handle back to its rear-most position.
- Insert a clearing rod of the proper size into the barrel, starting from the muzzle (Barrel may be damaged if the clearing rod is not proper size)


NOTE: Cocking handle must be at its rear-most position for the jammed ammo to clear the breech when it is pushed out by the ramrod.

- Push or tap ammo towards the breech end of the barrel until the pellet is extracted from the chamber.
- Operate carefully in order not to damage the chamber sealing O-ring.
- Remove and discard the ammo.
- Do not reuse that ammo.

If you are not successful removing the jammed ammo following above instructions, take no further action. REXIMEX Technical Service or an Authorized Service Station will unjam your airgun (Free of charge during the warranty period).

F. TRIGGER ADJUSTMENT

- First, remove the grip area using an Allen wrench. (Bottom of the grip)
- After removing the grip area successfully, trigger sensitivity adjustment may be done using an Allen wrench as shown on the picture.
- Re-mount the grip using the Allen wrench.

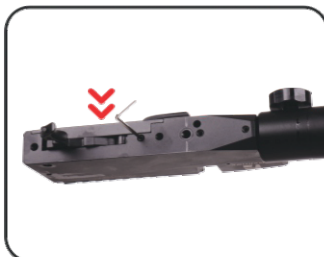

G. BUTT-PAD & CHEEK PIECE ADJUSTMENT

- Adjust up and down with the help of the buttons on the side of the pad and cheek piece.
- Adjust back and forth with the help of Allen wrench.



WARNING! DO NOT MODIFY OR ALTER YOUR AIRGUN. ATTEMPTS TO MODIFY THE AIRGUN IN ANY WAY INCONSISTENT WITH THIS MANUAL MAY MAKE YOUR AIRGUN UNSAFE TO USE, CAUSE SERIOUS INJURY OR DEATH, AND WILL MAKE THE WARRANTY INACTIVE.

WARNING! DO NOT ATTEMPT TO REPAIR YOUR AIRGUN OR TO DISASSEMBLE TO CORRECT AN OVER-FILL OR VALVE LOCK. PARTS MAY FLY OUT FROM THE AIRGUN AT DANGEROUS SPEEDS IF IT IS DISASSEMBLED WHILE PRESSURIZED.

H. MAINTENANCE

- Apply Reximex silicone chamber oil on the barrel breech and O-rings every 3 months or 500 shots.
- Periodically check your airgun. If anything feels different, like a shorter or weaker trigger pull, this may mean worn out or broken parts, call Reximex customer service for assistance before re-using your airgun.

REPLACEMENT OF O-RINGS

After a period of time, the O-rings on the fill probe will need to be replaced. The need for this will become noticeable if air is heard leaking from the nozzle while charging the airgun.

LUBRICANT

General: Keep the airgun clean and wipe it off with regular gun oil and a cloth occasionally.

Fill probe: Apply a thin layer of suitable mineral based oil occasionally or when dried out.

Magazines: Apply a thin layer of suitable mineral based oil occasionally or when dried out.

Cocking handle and Sidelever Sliding Surface: Apply a thin layer of a standard multipurpose grease occasionally or when dried out.

WARNING: Never use grease or spray oil in the moving parts inside the gun.

This can result in unstable power and also leakage. Be moderate with lubricant.

I. STORAGE


Store in a place that is dry and dark. Store with air pressure between 50200 bar in the airgun.

WARNING!

- Keep away from spaces with high humidity as steel parts might corrode.
- Keep away from bright sunlight as this shortens the life of the O-rings.
- Never store the airgun loaded with pellets.

2) "Draw Date" of this exploded view (on the right top corner of the page)

Ekim Tarihi: 2 Ocak 2023

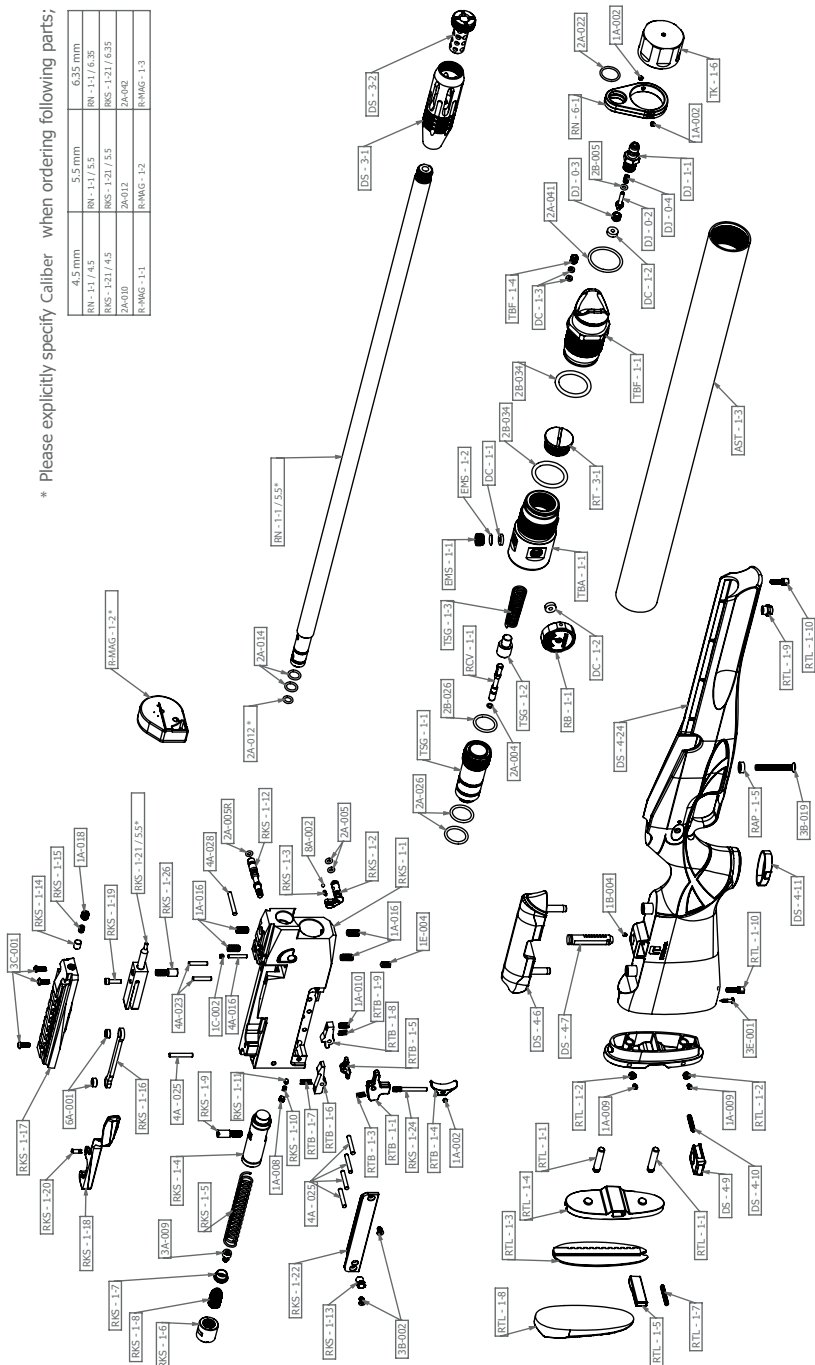


Part Code	Part Name	Part Code	Part Name
RKS - 1-1	Reximex Chassis	RN - 1-1	Reximex Barrel 58cm *
RKS - 1-2	Reximex Power Adjustment Valve	DS - 3-1	Daystar Moderator
RKS - 1-3	Reximex Power Adjustment Valve Spring	DS - 3-2	Daystar Moderator Inner Piece
RKS - 1-4	Reximex Hammer	2A-026	O-Ring - 16x2 NBR70
RKS - 1-5	Reximex Hammer Spring	TSG - 1-1	Reximex Hammer Valve Housing
RKS - 1-6	Reximex Hammer Spring Base Housing	2B-026	O-Ring - 16x2 NBR90
RKS - 1-7	Reximex Hammer Spring Base Bushing	2A-004	O-Ring - 3x1 NBR70
RKS - 1-8	Reximex Hammer Spring Base Inner Piece	RCV - 1-1	Reximex Hammer Valve
RKS - 1-9	Reximex Hammer Screw	TSG - 1-2	Reximex Hammer Valve Seal
RKS - 1-10	Reximex Safety Catch Spring	TSG - 1-3	Reximex Hammer Valve Spring
RKS - 1-11	Reximex Safety Catch	DC - 1-2	Thick Seal
RKS - 1-12	Reximex Safety	RB - 1-1	Air Tank Baromeer
RKS - 1-13	Reximex Safety Cap	DC - 1-1	Thin Seal
RKS - 1-14	Reximex Counter Pin	EMS - 1-1	Burst Disk Screw
RKS - 1-15	Reximex Counter Pin Spring	EMS - 1-2	Burst Disk
RKS - 1-16	Reximex Cocking Lever Link	TBA - 1-1	Air Tank Rear Tap (2 Hole)
RKS - 1-17	Reximex Top Cover	2B-034	O-Ring - 24.2x3 NBR90
RKS - 1-18	Reximex Cocking Lever	RT - 3-1	Air Tube Rear Tap Inner Lid
RKS - 1-19	Reximex Pellet Pusher Pin	TBF - 1-1	Air Tank Front Tap (Foster Type)
RKS - 1-20	Reximex Cocking Lever Link Rear Screw	DC - 1-3	Mini Seal
RKS - 1-21	Reximex Pellet Pusher *	TBF - 1-4	Discharge SetScrew
RKS - 1-22	Reximex Side Cover	2A-041	O-Ring - 21x2 NBR70
RTB - 1-1	Reximex Trigger Finger Piece Rod Base	DJ - 0-3	Dolum Jaki Arka Kapağı
RTB - 1-3	Reximex Trigger Finger Piece Rod Base Spring	DJ - 0-4	Filling Port Spring
RTB - 1-4	Reximex Trigger Finger Piece	2B-005	O-Ring - 3x1.5 NBR90
RTB - 1-5	Reximex Trigger Lever	DJ - 0-2	Filling Port Valve
RTB - 1-6	Reximex Hammer Holder	DJ - 1-1	Filling Port
RTB - 1-7	Reximex Hammer Holder Spring	RN - 6-1	Reximex 8-Ring
RTB - 1-8	Reximex Hammer Holder Sear	2A-022	O-Ring - 14x1.5 NBR70
RTB - 1-9	Reximex Hammer Holder Sear Spring	TK - 1-6	Reximex Tube Cap - 6
RKS - 1-24	Trigger Finger Piece Rod	AST - 1-3	Reximex Alluminum Tube (424 mm)
RKS - 1-26	Reximex Pellet Pusher Screw (Hammer Carrier Screw)	RTL - 1-8	Reximex Butt-Pad
3C-001	M3x8 Hexagon Socket Button Head Screw (ISO-7380)	RTL - 1-5	Reximex But Pad Adjustment Button
1A-018	M6x6 Flat Point SetScrew (ISO-4026)	RTL - 1-7	Reximex But Pad Adjustment Button Spring
6A-001	3x7x3 Ball Bearing	RTL - 1-3	Reximex Butt-Pad Frame
4A-016	2.5x16 Parallel Pin (ISO-8734)	RTL - 1-4	Reximex Stock Fixed Piece
4A-023	3x16 Parallel Pin (ISO-8734)	RTL - 1-1	Reximex Stock Mover Part Rods
4A-025	3x20 Parallel Pin (ISO-8734)	RTL - 1-2	Reximex Stock Fixed Piece Base Stescrew Anchor
1A-016	M5x10 Flat Point SetScrew (ISO-4026)	RTL - 1-6	Reximex Stock Fixed Piece Base
1A-010	M4x8 Flat Point SetScrew (ISO-4026)	1A-009	M4x6 Flat Point SetScrew (ISO-4026)
1A-008	M4x4 Flat Point SetScrew (ISO-4026)	DS - 4-6	Daystar Synthetic Cheekrest
4A-028	3x25 Parallel Pin (ISO-8734)	DS - 4-7	Daystar Cheekrest Mast
2A-005R	O-Ring - 3x1.5 NBR70 - Red	DS - 4-9	Daystar Cheekrest Button
2A-005	O-Ring - 3x1.5 NBR70	DS - 4-10	Daystar Cheekrest Button Spring
4A-002	D2.5 Steel Ball	3E-001	3.5x16 Wood Screw (DIN-7996)
1E-004	M5x7 - Ball Point SetScrew	RTL - 1-10	Reximex Sling Screw
1C-002	M3x3 Cup Point SetScrew (ISO-4029)	1B-004	M3x5 Cone Point SetScrew (ISO-4027)
3A-009	M4x6 Socket Head Screw (ISO-4762)	RTL - 1-9	Reximex Picatinny Screw Anchor
1A-002	M3x3 Flat Point SetScrew (ISO-4026)	RAP - 1-5	Reximex Stock Fix Screw Bushing
3B-002	M3x6 Socket Countersunk Head Screw (ISO-10642)	3B-019	M6x50 Socket Countersunk Head Screw (ISO-10642)
R-MAG - 1-2	Reximex Magazine*	DS - 4-11	Daystar Synthetic Handgrip Lid
2A-012	O-Ring - 5.5x1.5 NBR70 *	DS - 4-24	Daystar Synthetic Stock
2A-014	O-Ring - 8x1.5 NBR70		

Please explicitly specify following information when ordering spare parts;
 1) "Part Code" that's seen in this drawing
 2) "Draw Date" of this exploded view (on the right top corner of the page)
 3) "Caliber" information for parts with an *

Drawn On: Jan 2nd, 2023
 Resim Tarihi: 2 Ocak 2023

* Please explicitly specify Caliber when ordering following parts;

4.5 mm	5.5 mm	6.35 mm
RN-1-1/4.5	RN-1-1/5.5	RN-1-1/6.35
RKS-1-2/4.5	RKS-1-2/5.5	RKS-1-2/6.35
2A-010	2A-012	2A-002
R-MAG-1-1	R-MAG-1-2	R-MAG-1-3

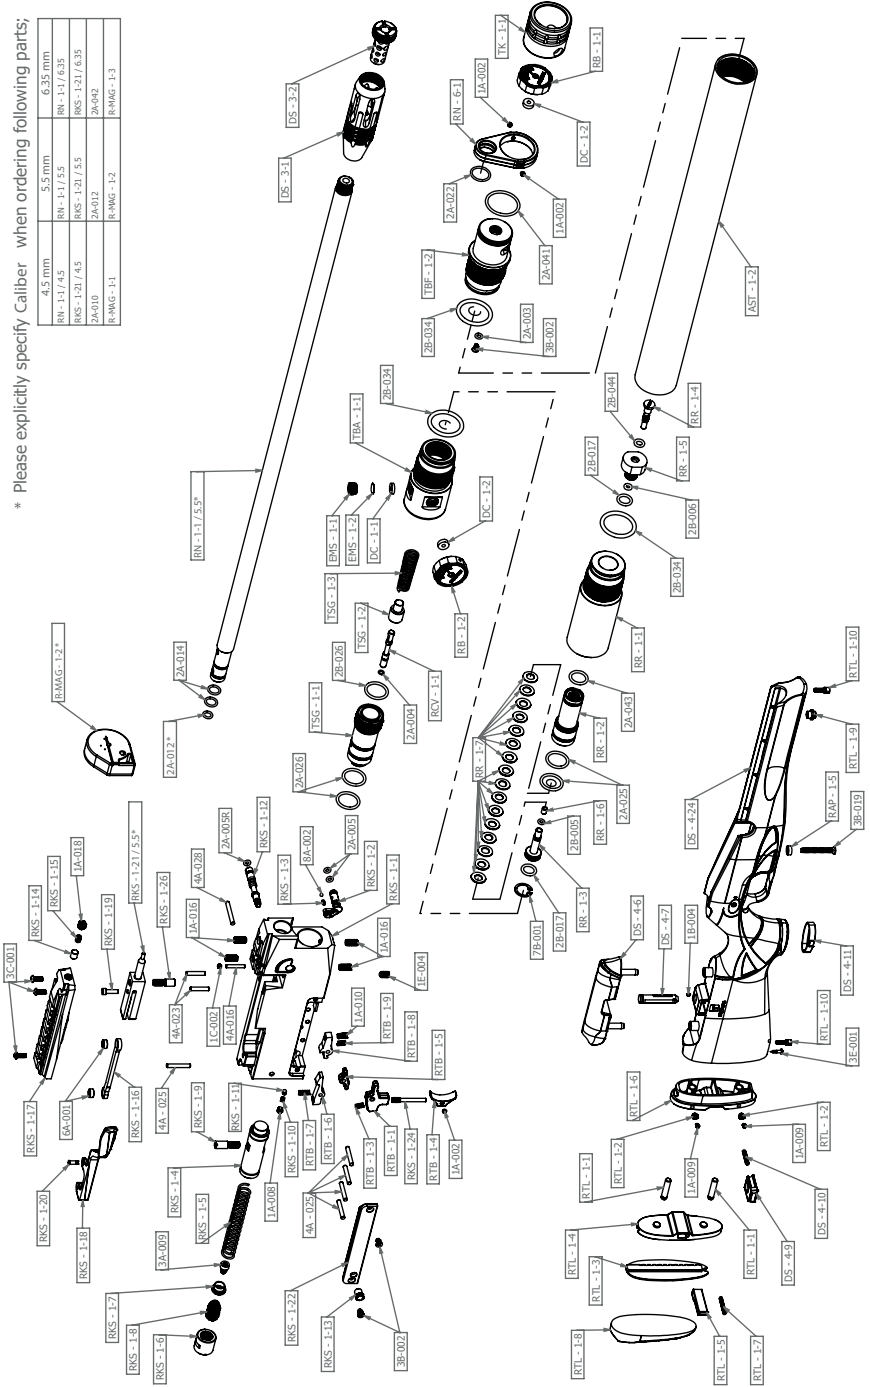


Part Code	Part Name	Part Code	Part Name
RKS - 1-1	Reximex Chassis	2A-026	O-Ring - 16x2 NBR70
RKS - 1-2	Reximex Power Adjustment Valve	TSG - 1-1	Reximex Hammer Valve Housing
RKS - 1-3	Reximex Power Adjustment Valve Spring	2B-026	O-Ring - 16x2 NBR90
RKS - 1-4	Reximex Hammer	2A-004	O-Ring - 3x1 NBR70
RKS - 1-5	Reximex Hammer Spring	RCV - 1-1	Reximex Hammer Valve
RKS - 1-6	Reximex Hammer Spring Base Housing	TSG - 1-2	Reximex Hammer Valve Seal
RKS - 1-7	Reximex Hammer Spring Base Bushing	TSG - 1-3	Reximex Hammer Valve Spring
RKS - 1-8	Reximex Hammer Spring Base Inner Piece	DC - 1-2	Thick Seal
RKS - 1-9	Reximex Hammer Screw	RB - 1-1	Air Tank Baromeer
RKS - 1-10	Reximex Safety Catch Spring	DC - 1-1	Thin Seal
RKS - 1-11	Reximex Safety Catch	EMS - 1-1	Burst Disk Screw
RKS - 1-12	Reximex Safety	EMS - 1-2	Burst Disk
RKS - 1-13	Reximex Safety Cap	TBA - 1-1	Air Tank Rear Tap (2 Hole)
RKS - 1-14	Reximex Counter Pin	2B-034	O-Ring - 24.2x3 NBR90
RKS - 1-15	Reximex Counter Pin Spring	2A-003	O-Ring - 3.5x1.5 NBR70
RKS - 1-16	Reximex Cocking Lever Link	TBF - 1-2	Air Tank Front Tap (DS Reg)
RKS - 1-17	Reximex Top Cover	2A-041	O-Ring - 21x2 NBR70
RKS - 1-18	Reximex Cocking Lever	RN - 6-1	Reximex 8-Ring
RKS - 1-19	Reximex Pellet Pusher Pin	2A-022	O-Ring - 14x1.5 NBR70
RKS - 1-20	Reximex Cocking Lever Link Rear Screw	TK - 1-1	Reximex Tube Cap - 1
RKS - 1-21	Reximex Pellet Pusher *	AST - 1-2	Reximex Alluminum Tube (363 mm)
RKS - 1-22	Reximex Side Cover	7B-001	D14 Internal Snapping (DIN472)
RTB - 1-1	Reximex Trigger Finger Piece Rod Base	2B-017	O-Ring - 9x2 NBR90
RTB - 1-3	Reximex Trigger Finger Piece Rod Base Spring	RR - 1-3	Reximex Regulator Valve
RTB - 1-4	Reximex Trigger Finger Piece	2B-005	O-Ring - 3x1.5 NBR90
RTB - 1-5	Reximex Trigger Lever	RR - 1-6	Reximex Regulator Valve Seal
RTB - 1-6	Reximex Hammer Holder	RR - 1-7	Reximex Regulator Disk Spring
RTB - 1-7	Reximex Hammer Holder Spring	2A-025	O-Ring - 15.5x2 NBR70
RTB - 1-8	Reximex Hammer Holder Sear	RR - 1-2	Reximex Regualtor Housing
RTB - 1-9	Reximex Hammer Holder Sear Spring	2A-043	O-Ring - 12x2 NBR70
RKS - 1-24	Trigger Finger Piece Rod	RR - 1-1	Reximex Regulator Outer Body
RKS - 1-26	Reximex Pellet Pusher Screw (Hammer Carrier S	2B-006	O-Ring - 3x2 NBR90
3C-001	M3x8 Hexagon Socket Button Head Screw (ISO-7	RR - 1-5	Reximex Regulator Outer Screw
1A-018	M6x6 Flat Point SetScrew (ISO-4026)	2B-044	O-Ring - 5x2 NBR90
6A-001	3x7x3 Ball Bearing	RR - 1-4	Reximex Regulator Inner Screw
4A-016	2.5x16 Parallel Pin (ISO-8734)	RTL - 1-8	Reximex Butt-Pad
4A-023	3x16 Parallel Pin (ISO-8734)	RTL - 1-5	Reximex But Pad Adjustment Button
4A-025	3x20 Parallel Pin (ISO-8734)	RTL - 1-7	Reximex But Pad Adjustment Button Spring
1A-016	M5x10 Flat Point SetScrew (ISO-4026)	RTL - 1-3	Reximex Butt-Pad Frame
1A-010	M4x8 Flat Point SetScrew (ISO-4026)	RTL - 1-4	Reximex Stock Fixed Piece
1A-008	M4x4 Flat Point SetScrew (ISO-4026)	RTL - 1-1	Reximex Stock Mover Part Rods
4A-028	3x25 Parallel Pin (ISO-8734)	RTL - 1-2	Reximex Stock Fixed Piece Base Stescrew Anchor
2A-005R	O-Ring - 3x1.5 NBR70 - Red	RTL - 1-6	Reximex Stock Fixed Piece Base
2A-005	O-Ring - 3x1.5 NBR70	1A-009	M4x6 Flat Point SetScrew (ISO-4026)
8A-002	D2.5 Steel Ball	DS - 4-6	Daystar Synthetic Cheekrest
1E-004	M5x7 - Ball Point SetScrew	DS - 4-7	Daystar Cheekrest Mast
1C-002	M3x3 Cup Point SetScrew (ISO-4029)	DS - 4-9	Daystar Cheekrest Button
3A-009	M4x6 Socket Head Screw (ISO-4762)	DS - 4-10	Daystar Cheekrest Spring
1A-002	M3x3 Flat Point SetScrew (ISO-4026)	3E-001	3.5x16 Wood Screw (DIN-7996)
3B-002	M3x6 Socket Countersunk Head Screw (ISO-106	RTL - 1-10	Reximex Sling Screw
R-MAG - 1-2	Reximex Magazine*	1B-004	M3x5 Cone Point SetScrew (ISO-4027)
2A-012	O-Ring - 5.5x1.5 NBR70 *	RTL - 1-9	Reximex Picatinny Screw Anchor
2A-014	O-Ring - 8x1.5 NBR70	RAP - 1-5	Reximex Stock Fix Screw Bushing

Please explicitly specify following information when ordering spare parts:
1) "Part Code" that's seen in this drawing
2) "Draw Date" of this exploded view (on the right top corner of the page)
3) "Caliber" information for parts with an "xx"

Drawn On: Jan 2nd, 2023
Resim Tarihi: 2 Ocak 2023

* Please explicitly specify Caliber when ordering following parts;

4.5 mm	5.5 mm	6.35 mm
RN - 1.1 / 4.5	RN - 1.1 / 5.5	RN - 1.1 / 6.35
RKS - 1.21 / 4.5	RKS - 1.21 / 5.5	RKS - 1.21 / 6.35
2A-010	2A-012	2A-042
R-MAG - 1.1	R-MAG - 1.2	R-MAG - 1.3

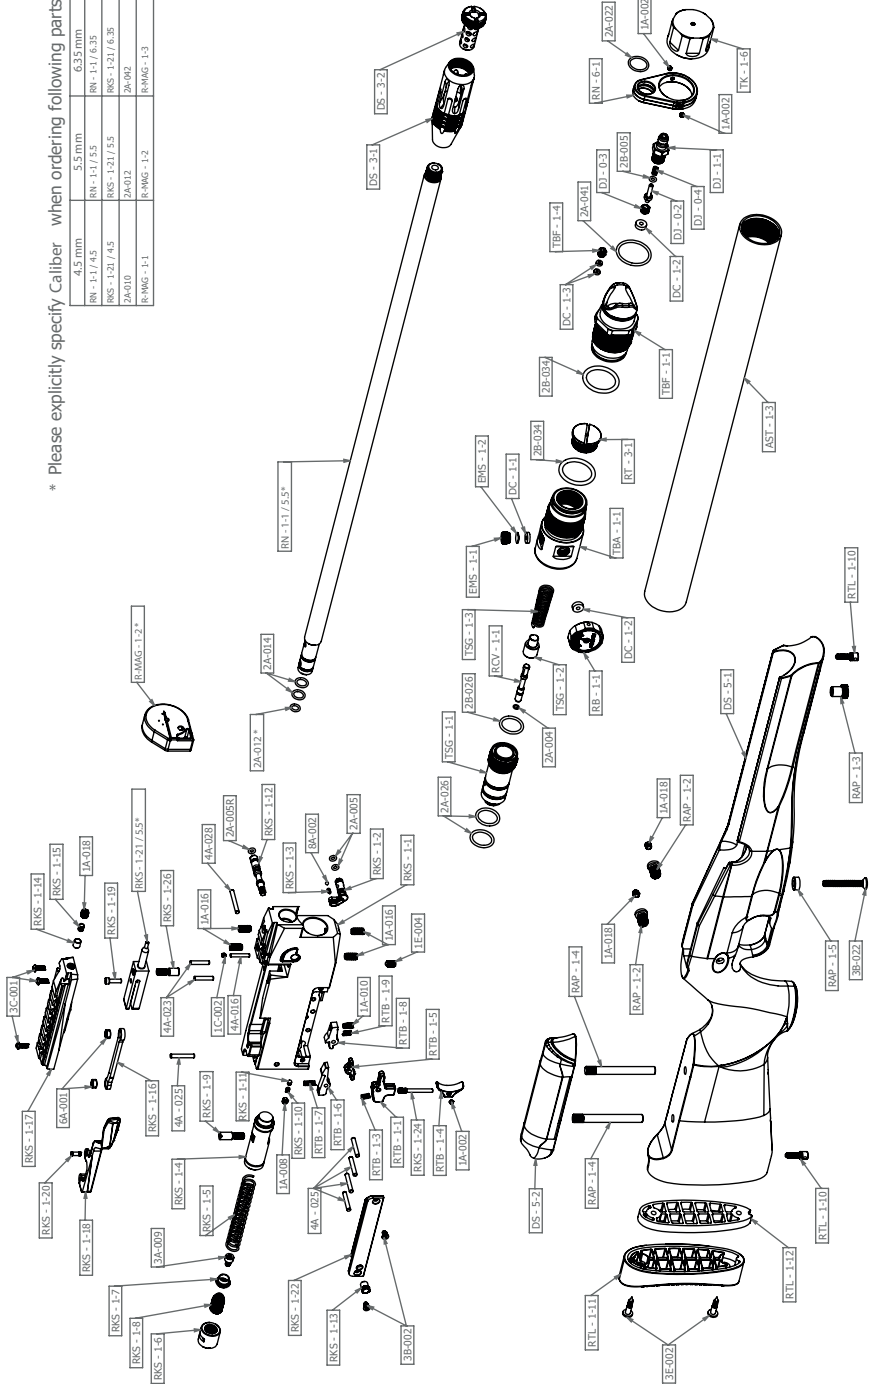

Part Code	Part Name	Part Code	Part Name
RKS - 1-1	Reximex Chassis	1A-002	M3x3 Flat Point SetScrew (ISO-4026)
RKS - 1-2	Reximex Power Adjustment Valve	3B-002	M3x6 Socket Countersunk Head Screw (ISO-10642)
RKS - 1-3	Reximex Power Adjustment Valve Spring	R-MAG - 1-2	Reximex Magazine*
RKS - 1-4	Reximex Hammer	2A-012	O-Ring - 5.5x1.5 NBR70 *
RKS - 1-5	Reximex Hammer Spring	2A-014	O-Ring - 8x1.5 NBR70
RKS - 1-6	Reximex Hammer Spring Base Housing	RN - 1-1	Reximex Barrel 58cm *
RKS - 1-7	Reximex Hammer Spring Base Bushing	DS - 3-1	Daystar Moderator
RKS - 1-8	Reximex Hammer Spring Base Inner Piece	DS - 3-2	Daystar Moderator Inner Piece
RKS - 1-9	Reximex Hammer Screw	2A-026	O-Ring - 16x2 NBR70
RKS - 1-10	Reximex Safety Catch Spring	TSG - 1-1	Reximex Hammer Valve Housing
RKS - 1-11	Reximex Safety Catch	2B-026	O-Ring - 16x2 NBR90
RKS - 1-12	Reximex Safety	2A-004	O-Ring - 3x1 NBR70
RKS - 1-13	Reximex Safety Cap	RCV - 1-1	Reximex Hammer Valve
RKS - 1-14	Reximex Counter Pin	TSG - 1-2	Reximex Hammer Valve Seal
RKS - 1-15	Reximex Counter Pin Spring	TSG - 1-3	Reximex Hammer Valve Spring
RKS - 1-16	Reximex Cocking Lever Link	DC - 1-2	Thick Seal
RKS - 1-17	Reximex Top Cover	RB - 1-1	Air Tank Baromeer
RKS - 1-18	Reximex Cocking Lever	DC - 1-1	Thin Seal
RKS - 1-19	Reximex Pellet Pusher Pin	EMS - 1-1	Burst Disk Screw
RKS - 1-20	Reximex Cocking Lever Link Rear Screw	EMS - 1-2	Burst Disk
RKS - 1-21	Reximex Pellet Pusher *	TBA - 1-1	Air Tank Rear Tap (2 Hole)
RKS - 1-22	Reximex Side Cover	2B-034	O-Ring - 24.2x3 NBR90
RTB - 1-1	Reximex Trigger Finger Piece Rod Base	RT - 3-1	Air Tube Rear Tap Inner Lid
RTB - 1-3	Reximex Trigger Finger Piece Rod Base Spring	TBF - 1-1	Air Tank Front Tap (Foster Type)
RTB - 1-4	Reximex Trigger Finger Piece	DC - 1-3	Mini Seal
RTB - 1-5	Reximex Trigger Lever	TBF - 1-4	Discharge SetScrew
RTB - 1-6	Reximex Hammer Holder	2A-041	O-Ring - 21x2 NBR70
RTB - 1-7	Reximex Hammer Holder Spring	DJ - 0-3	Dolum Jaki Arka Kapağı
RTB - 1-8	Reximex Hammer Holder Sear	DJ - 0-4	Filling Port Spring
RTB - 1-9	Reximex Hammer Holder Sear Spring	2B-005	O-Ring - 3x1.5 NBR90
RKS - 1-24	Trigger Finger Piece Rod	DJ - 0-2	Filling Port Valve
RKS - 1-26	Reximex Pellet Pusher Screw (Hammer Carrier S	DJ - 1-1	Filling Port
3C-001	M3x8 Hexagon Socket Button Head Screw (ISO-7	RN - 6-1	Reximex 8-Ring
1A-018	M6x6 Flat Point SetScrew (ISO-4026)	2A-022	O-Ring - 14x1.5 NBR70
6A-001	3x7x3 Ball Bearing	TK - 1-6	Reximex Tube Cap - 6
4A-016	2.5x16 Parallel Pin (ISO-8734)	AST - 1-3	Reximex Alluminum Tube (424 mm)
4A-023	3x16 Parallel Pin (ISO-8734)	3E-002	5x20 Wood Screw (DIN-7996)
4A-025	3x20 Parallel Pin (ISO-8734)	RTL - 1-11	Reximex Butt-Pad - 1
1A-016	M5x10 Flat Point SetScrew (ISO-4026)	RTL - 1-12	Reximex Butt-Pad Frame - 1
1A-010	M4x8 Flat Point SetScrew (ISO-4026)	RTL - 1-10	Reximex Sling Screw
1A-008	M4x4 Flat Point SetScrew (ISO-4026)	RAP - 1-4	Reximex Woodstock Cheekrest Mast
4A-028	3x25 Parallel Pin (ISO-8734)	DS - 5-2	Daystar Woodstock Cheekrest
2A-005R	O-Ring - 3x1.5 NBR70 - Red	RAP - 1-2	Reximex Woodstock Cheekrest Fix Bushing
2A-005	O-Ring - 3x1.5 NBR70	RAP - 1-5	Reximex Stock Fix Screw Bushing
8A-002	D2.5 Steel Ball	RAP - 1-3	Reximex Woodstock Picatinny Anchor
1E-004	M5x7 - Ball Point SetScrew	DS - 5-1	Daystar Woodstock
1C-002	M3x3 Cup Point SetScrew (ISO-4029)	3B-022	M6x45 Socket Countersunk Head Screw (ISO-10642)

* Please explicitly specify Caliber when ordering following parts;



Part Code	Part Name	Part Code	Part Name
RKS - 1-1	Reximex Chassis	2A-014	O-Ring - 8x1.5 NBR70
RKS - 1-2	Reximex Power Adjustment Valve	RN - 1-1	Reximex Barrel 58cm *
RKS - 1-3	Reximex Power Adjustment Valve Spring	DS - 3-1	Daystar Moderator
RKS - 1-4	Reximex Hammer	DS - 3-2	Daystar Moderator Inner Piece
RKS - 1-5	Reximex Hammer Spring	2A-026	O-Ring - 16x2 NBR70
RKS - 1-6	Reximex Hammer Spring Base Housing	TSG - 1-1	Reximex Hammer Valve Housing
RKS - 1-7	Reximex Hammer Spring Base Bushing	2B-026	O-Ring - 16x2 NBR90
RKS - 1-8	Reximex Hammer Spring Base Inner Piece	2A-004	O-Ring - 3x1 NBR70
RKS - 1-9	Reximex Hammer Screw	RCV - 1-1	Reximex Hammer Valve
RKS - 1-10	Reximex Safety Catch Spring	TSG - 1-2	Reximex Hammer Valve Seal
RKS - 1-11	Reximex Safety Catch	TSG - 1-3	Reximex Hammer Valve Spring
RKS - 1-12	Reximex Safety	DC - 1-2	Thick Seal
RKS - 1-13	Reximex Safety Cap	RB - 1-1	Air Tank Baromeer
RKS - 1-14	Reximex Counter Pin	DC - 1-1	Thin Seal
RKS - 1-15	Reximex Counter Pin Spring	EMS - 1-1	Burst Disk Screw
RKS - 1-16	Reximex Cocking Lever Link	EMS - 1-2	Burst Disk
RKS - 1-17	Reximex Top Cover	TBA - 1-1	Air Tank Rear Tap (2 Hole)
RKS - 1-18	Reximex Cocking Lever	2B-034	O-Ring - 24.2x3 NBR90
RKS - 1-19	Reximex Pellet Pusher Pin	2A-003	O-Ring - 3.5x1.5 NBR70
RKS - 1-20	Reximex Cocking Lever Link Rear Screw	TBF - 1-2	Air Tank Front Tap (DS Reg)
RKS - 1-21	Reximex Pellet Pusher *	2A-041	O-Ring - 21x2 NBR70
RKS - 1-22	Reximex Side Cover	RN - 6-1	Reximex 8-Ring
RTB - 1-1	Reximex Trigger Finger Piece Rod Base	2A-022	O-Ring - 14x1.5 NBR70
RTB - 1-3	Reximex Trigger Finger Piece Rod Base Spring	TK - 1-1	Reximex Tube Cap - 1
RTB - 1-4	Reximex Trigger Finger Piece	AST - 1-2	Reximex Alluminum Tube (363 mm)
RTB - 1-5	Reximex Trigger Lever	7B-001	D14 Internal Snapping (DIN472)
RTB - 1-6	Reximex Hammer Holder	2B-017	O-Ring - 9x2 NBR90
RTB - 1-7	Reximex Hammer Holder Spring	RR - 1-3	Reximex Regulator Valve
RTB - 1-8	Reximex Hammer Holder Sear	2B-005	O-Ring - 3x1.5 NBR90
RTB - 1-9	Reximex Hammer Holder Sear Spring	RR - 1-6	Reximex Regulator Valve Seal
RKS - 1-24	Trigger Finger Piece Rod	RR - 1-7	Reximex Regulator Disk Spring
RKS - 1-26	Reximex Pellet Pusher Screw (Hammer Carrier S	2A-025	O-Ring - 15.5x2 NBR70
3C-001	M3x8 Hexagon Socket Button Head Screw (ISO-7	RR - 1-2	Reximex Regualtor Housing
1A-018	M6x6 Flat Point SetScrew (ISO-4026)	2A-043	O-Ring - 12x2 NBR70
6A-001	3x7x3 Ball Bearing	RR - 1-1	Reximex Regulator Outer Body
4A-016	2.5x16 Parallel Pin (ISO-8734)	2B-006	O-Ring - 3x2 NBR90
4A-023	3x16 Parallel Pin (ISO-8734)	RR - 1-5	Reximex Regulator Outer Screw
4A-025	3x20 Parallel Pin (ISO-8734)	2B-044	O-Ring - 5x2 NBR90
1A-016	M5x10 Flat Point SetScrew (ISO-4026)	RR - 1-4	Reximex Regulator Inner Screw
1A-010	M4x8 Flat Point SetScrew (ISO-4026)	3E-002	5x20 Wood Screw (DIN-7996)
1A-008	M4x4 Flat Point SetScrew (ISO-4026)	RTL - 1-11	Reximex Butt-Pad - 1
4A-028	3x25 Parallel Pin (ISO-8734)	RTL - 1-12	Reximex Butt-Pad Frame - 1
2A-005R	O-Ring - 3x1.5 NBR70 - Red	RTL - 1-10	Reximex Sling Screw
2A-005	O-Ring - 3x1.5 NBR70	RAP - 1-4	Reximex Woodstock Cheekrest Mast
8A-002	D2.5 Steel Ball	DS - 5-2	Daystar Woodstock Cheekrest
1E-004	M5x7 - Ball Point SetScrew	RAP - 1-2	Reximex Woodstock Cheekrest Fix Bushing
1C-002	M3x3 Cup Point SetScrew (ISO-4029)	RAP - 1-5	Reximex Stock Fix Screw Bushing
3A-009	M4x6 Socket Head Screw (ISO-4762)	RAP - 1-3	Reximex Woodstock Picatinny Anchor
1A-002	M3x3 Flat Point SetScrew (ISO-4026)	DS - 5-1	Daystar Woodstock
3B-002	M3x6 Socket Countersunk Head Screw (ISO-1064	3B-022	M6x45 Socket Countersunk Head Screw (ISO-10642)
R-MAG - 1-2	Reximex Magazine*		

NOTES

[illegible]



REXIMEX İt. İh. Av Malz. Sav. San. Tic. Ltd. Şti.

📍 Bayaşıar Mahallesi 41958. Sokak No:3 Beyşehir / Konya

☎ 0332 511 0055 ✉ export@reximex.com

🌐 www.reximex.com

